Ultraglide 2200w steam iron

www.breville.co.uk

product safety

Please read these instructions before operating the appliance and retain them for future use.

⚠ This product is not suitable for use by children, and may not be suitable for persons requiring supervision unless they receive instruction by a competent person on how to safely use the product. Children should be supervised to ensure that they do not play with the product.

⚠ Never use this appliance for anything other than its intended use. This appliance is for household use only. Do not use this appliance outdoors.

⚠ Always ensure that hands are dry before handling the plug or switching on the appliance.

⚠ Never leave the appliance unattended when it is connected to the mains supply.

⚠ Ensure the appliance is switched off and unplugged from the supply socket before filling or emptying the water tank, after use and before cleaning.

⚠ Do not use the appliance if it has been dropped, if there are any visible signs of damage or if it is leaking.

⚠ Always use the appliance on a stable, secure, dry and level surface. When placing the appliance on its stand, ensure that the surface on which the stand is placed is stable.

⚠ Do not touch the metal parts of the appliance during use as they may become very hot.

⚠ Never operate the appliance by means of an external timer or separate remote-control system.

⚠ This appliance must not be placed on or near any potentially hot surfaces (such as a gas or electric hob).

⚠ The power cord is not replaceable by the user. Always return the appliance if the power cord is damaged to avoid any hazard.

⚠ Always allow the appliance to cool before cleaning or storing.

⚠ Never immerse any part of the appliance or power cord and plug in water or any other liquid.

⚠ Never let the power cord hang over the edge of a worktop, touch hot surfaces or become knotted, trapped or pinched.

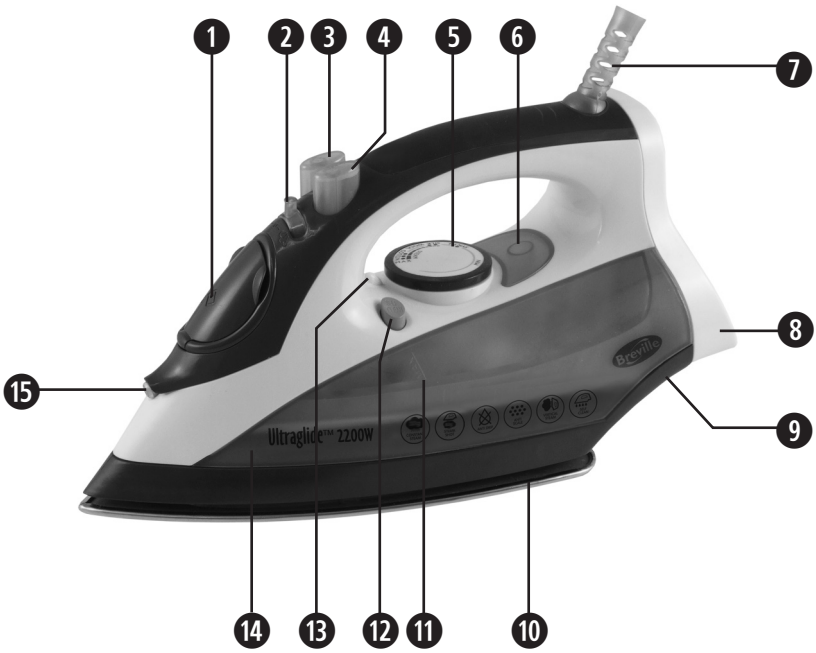

1. **Water tank inlet cover**
2. **Steam control**
3. **Shot of steam button**
4. **Spray button**
5. **Temperature selector**
6. **Indicator light**
7. **Flexible cord protector**
8. **Heel rest**
9. **Cord wrap**
10. **Stainless steel soleplate**
11. **Water level maximum indicator**
12. **Self clean button**
13. **Pointer**
14. **Water tank**
15. **Spray nozzle**

Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in these instructions.

before first use

⚠ Remove all packaging including any soleplate protection before heating the iron.

Wipe over the soleplate with a cloth moistened with methylated spirit. Remove the methylated spirit with a damp cloth then dry the soleplate thoroughly.

Fill the water tank and then empty it. This will rinse out any foreign particles remaining in the water tank from the manufacturing process. Never fill your iron directly under a tap. Always use the measuring cup supplied.

Before connecting your iron to the mains supply, make sure your supply voltage is the same as the one indicated on your iron.

When you first use your iron, there may be a slight odour and it may smoke slightly for the first few minutes of operation. This is quite normal and will disappear.

⚠ **Never use fabric conditioner, starches or any other chemicals or additives.**

1. Ensure the iron is switched off and unplugged from the mains supply socket.
2. Set the steam control to the no steam position (0).
3. Place the iron horizontally on a flat, stable, dry, heat resistant and level surface and open the water tank inlet cover.
4. Using the supplied measuring cup, fill the water tank with ordinary tap water. To avoid air locks, tilt the iron slightly while filling it.
5. Don't fill the iron above the water level indicator MAX marking. Check the water level by standing the iron on its heel.
6. When the iron is filled close the water tank inlet cover.

TIP: We recommend that you:

- Start with the fabrics to be ironed on a low temperature such as synthetic material. Finish ironing with those fabrics which respond best to higher temperatures such as linen.
- If you iron a fabric made of a blend of fibres; set the temperature control dial for the most delicate fibre.
- Never use the burst of steam button on silks or synthetics.
- When using starch, it should be sprayed onto the reverse side of the fabric and the soleplate cleaned more frequently.
- Do not iron over sharp or hard objects such as buttons, studs and zippers, as these will scratch the surface of the soleplate.

Ironing without steam

You may see this ‘Do not steam’ symbol on certain delicate fabrics. If you intend to dry iron fabrics, there is no need to fill the water tank. However, if water is already in the water tank, you do not need to empty it.

1. Set the steam control to the no steam position (0).
2. Plug your iron into the mains supply and switch on.
3. Set the temperature selector to the required temperature.
4. The indicator light will illuminate while the iron is heating up.
5. When the light goes out, your iron is ready to use. The indicator light will continue to turn on and off during ironing as the iron maintains the soleplate temperature.

Steam ironing

⚠ During steam ironing, if you do not allow the iron to reach the selected temperature water may drip from the soleplate.

It is recommended that for harder to iron fabrics such as cotton and linen, steam should be used when ironing.

When ironing cotton and linen always select the highest temperature. Steam should never be used on delicate fabrics like nylons, acrylics and synthetics.

1. Following the steps on page 5 fill the iron with water.
2. Plug your iron into the mains supply and switch on.
3. Turn the temperature selector until the pointer is within the steam setting range. The indicator light will illuminate. When the indicator light goes out the iron is ready to use. The indicator light will continue to turn on and off during ironing as the iron maintains the soleplate temperature.
4. Adjust the steam control for the desired steam output.
5. Adjust the steam control lever to the right to increase the amount of steam, or to the left to decrease the amount of steam.
6. The iron will automatically begin to steam as soon as the iron is used.
7. The steam can be shut off at any time by setting the steam control to the no steam position (0).

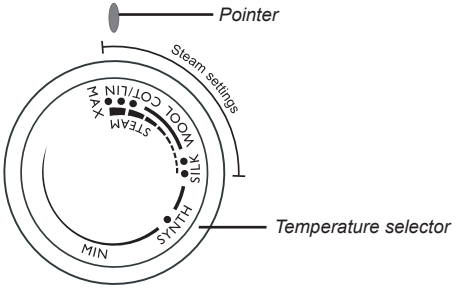

Burst of Steam

Note: The temperature selector must be set within the steam setting range (see page 6) when using the shot of steam function. Wait for several seconds between each press of the steam button.

1. Press the shot of steam button whenever you have a stubborn crease that needs extra steam. Steam will burst from the holes in the soleplate into the fabric.

Vertical Steam Ironing

⚠ **Never iron garments when they are being worn.**

1. Your iron can be used for vertical steam ironing. This process can be applied to curtains, dresses on hangers etc.
2. Following the steps on page 5 fill the iron with water.
3. Plug your iron into the mains supply and switch on.
4. Turn the temperature selector until the pointer is within the steam setting range. The hotter the iron, the more steam is generated.
5. The temperature indicator light will illuminate to show that the iron is heating.
6. When the indicator light goes out, the iron is ready to use. The indicator light will cycle on and off during ironing as the iron maintains the soleplate temperature.
7. Hold the iron 15cm (6 inches) from the fabric.
8. Press the shot of steam button. The steam will penetrate the fabric removing the creases. To apply more steam press the shot of steam button again.

Spraying

Note: The spray function will only operate when there is water in the water tank.

1. The water spray can be used to help iron heavy fabrics or difficult areas (collars, pockets, sleeves, creases, etc). It can also be used when ironing delicate fabrics which cannot be steam ironed.
2. Simply press the spray button as required to emit a spray of water. If the spray is being used for the first time, or if the iron has been standing for some time, you may need to press the spray button a few times to prime the spray before it works correctly.

Note: When the temperature selector is changed from a high setting to a lower setting during ironing, the indicator light will go out immediately. This indicates that the iron is cooling to the selected temperature. To ensure that the iron has reached the selected temperature and is not too hot, wait until the indicator light comes on again, and then goes out before ironing.

Anti-Drip Function

- The supply of water is cut off automatically to avoid any drips from the soleplate when the temperature of the iron is insufficient to produce steam.

Anti-Scale Filter

- Your iron is fitted with a permanent anti-scale filter. This filter is fixed and cannot be removed for cleaning.
- The filter is designed to reduce the build-up of limescale inside your iron. Limescale occurs during steam ironing due to water hardness.
- Water hardness varies from one area to another. The effectiveness of the filter will depend on how ‘hard’ your water is.

⚠ Do not use harsh abrasives, chemical cleaners or solvents to clean the exterior of your iron because they will damage the surface.

Cleaning the Soleplate on your Iron

After each use, allow iron to cool fully before wiping the soleplate with a damp soft cloth. If polyester has burnt to the soleplate, iron a damp cotton cloth while hot. If necessary, allow unit to cool fully and wipe over the soleplate with a soft cloth and a small amount of methylated spirits. Remove the methylated spirit with a damp cloth. Ensure soleplate is dried thoroughly.

⚠ Only press the self-clean button when you want to activate the self cleaning system. Never press the self-clean button when ironing.

Self-cleaning

1. The self-clean function removes scale and impurities. Use the self-clean function once every two weeks. If the water in your area is very hard, the self clean function should be used more frequently.
2. Ensure the iron is switched off and unplugged from the mains supply socket.
3. Set the steam control to the no steam position (0).
4. Using the measuring cup, fill the iron with water to the MAX fill level.
5. Stand the iron on its heel rest, plug in and switch on at the mains supply.
6. Rotate the temperature selector until the pointer is aligned with the ‘MAX’ setting.
7. The indicator light will illuminate when the iron is heating up. When the light goes out, the iron is ready to use.
8. Unplug the iron and hold it over a sink with the sole-plate facing downwards.
9. Press the ‘SELF CLEAN’ button. Hot water and steam will be ejected from the holes in the soleplate, along with any impurities.
10. Release the ‘SELF CLEAN’ button after one minute or when the water tank is empty.
11. Stand the iron on its heel rest, plug into the supply and switch on. When the indicator light goes out, iron an old piece of cloth to allow any remaining water to escape.
12. After use, switch off and unplug the iron at the mains supply and allow to cool fully. Empty any remaining water.

Cleaning the Steam Holes

To remove build-up from the steam holes which may affect steam performance, use a cotton wool tip moistened in methylated spirits. Wipe over with a damp cloth.

To clean the exterior of your iron, wipe over with a damp soft cloth and wipe dry. Ensure the soleplate is then dried thoroughly.

Putting your Iron Away

1. Set the steam control to the no steam position (0).
2. Turn the power off and remove the plug from the power outlet.
3. When the soleplate has cooled, empty remaining water from the tank.

Storage

1. Always store the iron on its heel rest, allowing to cool for 30 minutes.
2. Do not store the iron with the soleplate facing down, or in the carton.
3. Do not wrap the cord around the soleplate. The cord can be neatly wrapped around the heel of the iron.

⚠ This appliance must be earthed.

This appliance is fitted with either a moulded or rewirable BS1363, 13 amp plug. The fuse should be rated at 13 amps and be ASTA approved to BS1362.

If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.

If the plug is unsuitable, it should be dismantled and removed from the supply cord and an appropriate plug fitted as detailed below. If you remove the plug it must not be connected to a 13 amp socket and the plug must be disposed of immediately.

The wires of the mains lead are coloured in accordance with the following code:

GREEN/YELLOW = EARTH BLUE = NEUTRAL BROWN = LIVE

The wire which is coloured GREEN/YELLOW must be connected to the terminal in your plug which is marked with an E or by the earth symbol (⏚) or coloured GREEN or GREEN /YELLOW.

The wire which is coloured BLUE must be connected to the terminal in your plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in your plug which is marked with the letter L or coloured RED.

If any other plug is used, a 13 amp fuse must be fitted either in the plug or adaptor or at the distributor board.

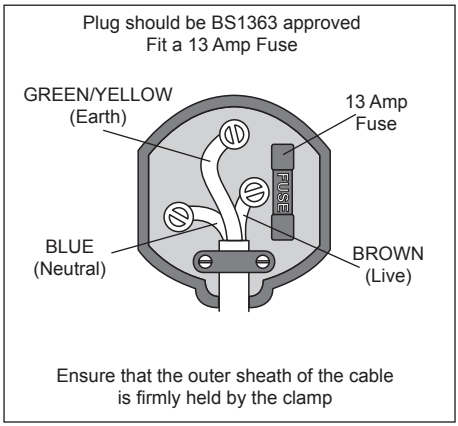

after sales service

These appliances are built to the very highest of standards. There are no user serviceable parts. Follow these steps if the unit fails to operate:

1. Check the instructions have been followed correctly.
2. Check that the fuse has not blown.
3. Check that the mains supply is functional.

If the appliance will still not operate, return the appliance to the place it was purchased for a replacement. To return the appliance to the Customer Service Department, follow the steps below:

1. Pack it carefully (preferably in the original carton). Ensure the unit is clean.
2. Enclose your name and address and quote the model number on all correspondence.
3. Give the reason why you are returning it.
4. If within the guarantee period, state when and where it was purchased and include proof of purchase (e.g. till receipt).
5. Send it to our Customer Service Department at the address below:

Customer Service Department

Pulse Home Products Limited

Middleton Road

Royton

Oldham

OL2 5LN, UK.

Telephone: 0161 621 6900 Fax: 0161 626 0391

e-mail: info@pulse-uk.co.uk

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions provided, that it is not connected to an unsuitable electricity supply, dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

Nothing in this guarantee or the instructions relating to the product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development, we reserve the right to change this product, packaging and documentation without notice.

CE This product is manufactured to comply with the radio interference requirements of EEC directive 93/68 EEC.

Vine Mill, Middleton Road, Royton, Oldham OL2 5LN, UK
www.breville.co.uk
Breville is a registered trademark of Pulse Home Products Limited
© Pulse Home Products Limited

92981-0
VIN145_Iss_1 04/09